

Installation Instructions

Products: Perimeter Seals DS10-R, DS10-47, DS20-24SB

Using this DSA installation method will ensure that your door seals work correctly.

Preparation:

1. Install door and hardware first.
2. If used in conjunction with a face fixed bottom seal, perimeter seals must be installed to the door frame first.
3. All measurements will need to allow for paint or veneer finishes applied to doors.

Installation:

1. Unpack and remove the gasket seal from the aluminium carrier by pulling out, starting from the ends.
2. Measure and cut the aluminium carrier to length required (we recommend seals be mitre joined).
3. Remove the cover strip from aluminium carrier as *Figure 1* below.
4. Use packer plates supplied (3.2mm for DS10-R, DS10-47; 5.0mm for DS20-24SB) to place between door face and aluminium carrier and mark screw positions through the screw holes.
5. Drill screw holes and fix aluminium carriers with screws provided.
6. Replace cover strip back into aluminium carrier using tilt/push method as *Figure 2*.
7. Replace gasket seal into aluminium carrier and trim ends to size with a knife or scissors as *Figure 3*.

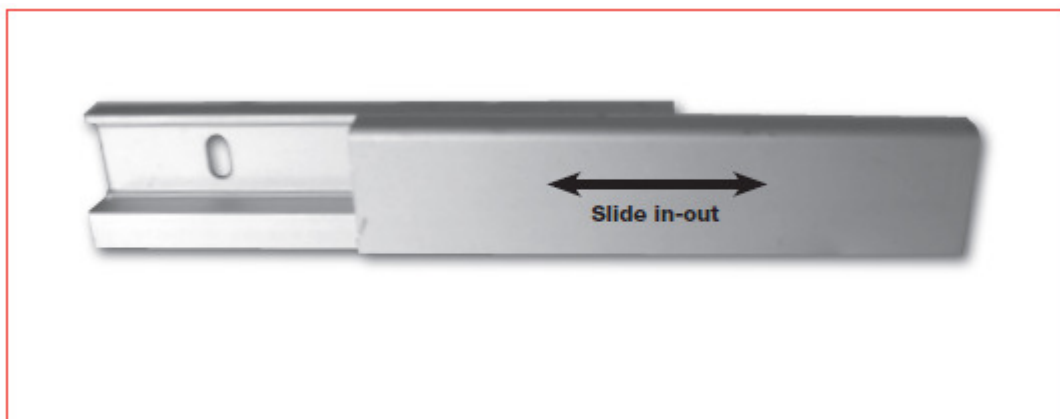


Figure 1

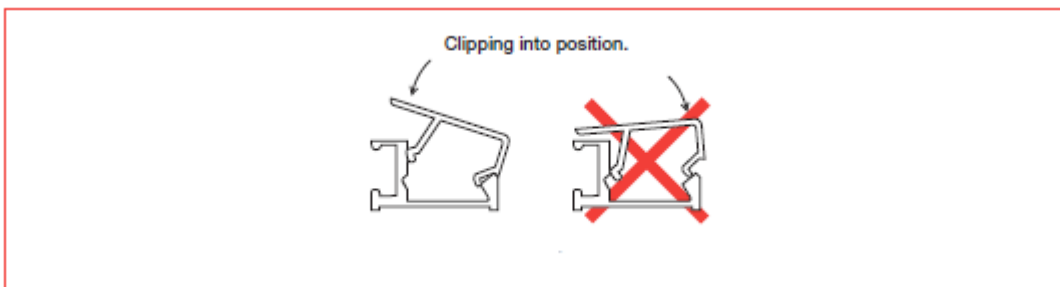


Figure 2

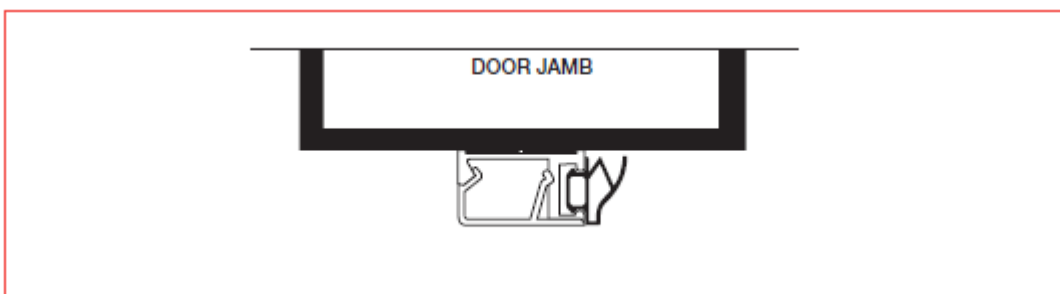


Figure 3