

Care & Maintenance

FREQUENCY OF CARE AND MAINTENANCE

Frequency of care, maintenance and cleaning is largely dependent on the location of the doors and windows and their proximity to industrial or marine environments where monthly or more frequent cleaning is recommended if any deterioration of surface finish is apparent. However, in any event, general cleaning should be carried out at least quarterly.

DOOR SEALS

From time to time check door seals to make sure they are functioning correctly. Distorted, split or over compressed seals should be replaced as they will have become ineffective or may even prevent proper closure of the door. Ensure seals are fully held securely within carrier where applicable. Make sure fixings are tight and that self-adhesive seals are not coming away.

THRESHOLDS

Removable thresholds, including thresholds for wheelchair access, should not require any maintenance but regular inspection of the condition of the threshold, its seals and fixings is recommended to ensure they are functioning correctly. Clean off any accumulated dirt or obstructions. Distorted or damaged thresholds or damaged seals may impede the proper closing of the door and must be replaced. Accumulations of dirt on the threshold and seals must be removed and the surface of the threshold wiped clean from time to time to maintain its life and appearance.

AUTOMATIC DOOR BOTTOM SEALS

Check seals as for Thresholds above. In addition, check the operation of the drop seal and the alignment of the strike to ensure that the seal is triggered and continues to drop across the entire length of the seal. Any defective, distorted or damaged seals should be replaced.

DIGISAFE

Provided the Digisafe has been correctly fitted it should continue to function safely without the need for any regular maintenance. However, as with all safety products, it should be checked from time to time to ensure it is in good working condition. Check the Digisafe on the side of the door opposite the hinge pin has no splits and that when the door is opened the Digisafe operates correctly. Any marks can be wiped away from the vertical gap cover section using mild soapy water. Wipe clean and dry.

GLASS LIP / GLASS LIP SLIDE / GLASS BUMPER

Regular dusting and periodic washing with a mild solution of washing detergent and warm water, then dry and polish with a soft cloth. Check the adhesive seals are not coming away.

CLEAR ANODISED ALUMINIUM

Regular dusting and periodic washing with a mild solution of washing detergent and warm water, then dry and polish with a soft cloth. Silicone wax furniture cream may be applied with a soft cloth after cleaning for protection. Do not under any circumstances use any abrasive type cleaning agent or any abrasive cleaning material such as steel wool or alike.

POWDER COATED FINISHES

Regular dusting and periodic washing with a mild solution of washing detergent and warm water, then dry and polish with a soft cloth. No additional treatment is required. Under no circumstances should third part protective films or adhesive tapes be applied as they may damage 'applied' powder coated finishes

Guarantee

DSA guarantees their Products against defects in workmanship and materials, subject to fair wear and tear, for a period of (3) three years from the date of purchase. No cost beyond the provision of replacement DSA Products will be accepted. This guarantee does not include deterioration due to climatic conditions, harsh environment, abnormal frequency of use, improper installation, failure to follow installation instructions, improper maintenance, indirect or inconsequential loss or damage, cost of removal and/or replacement, cost of transport/freight and/or travelling time.

Contact Details: